





Truss+ 2010 Modify Truss

Common trusses



Modify Truss

- Select Common truss.
- Choose the *Modify Truss* option from “Truss+” menu.

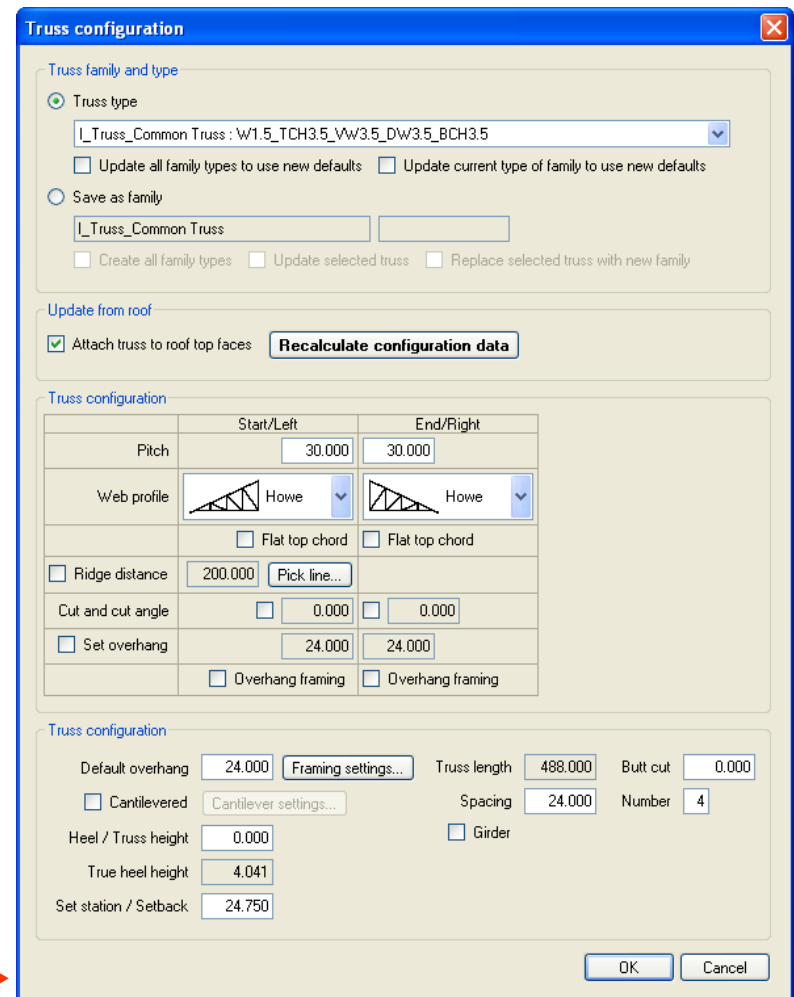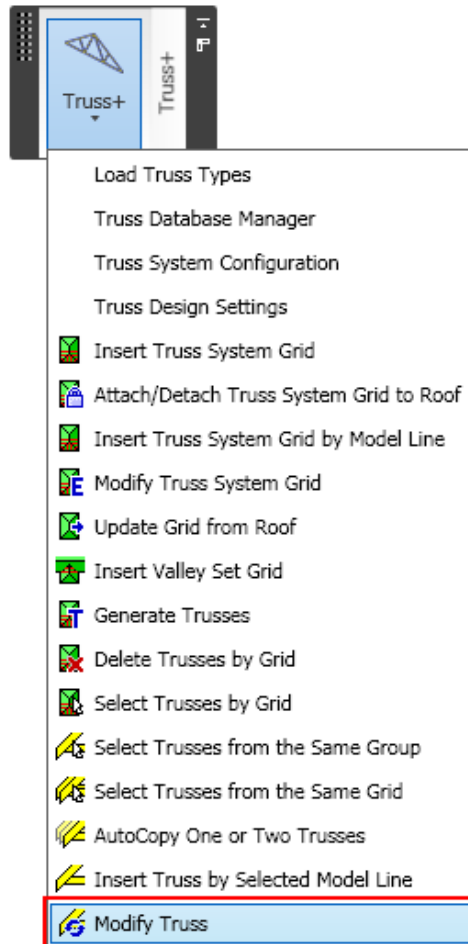

Modify Truss



In a coming dialog the user can modify instance parameters of the inserted truss, update default parameters of the current family or create a new one.

- Change instance parameters of a selected truss (default values of instance parameters remain the same).
- Change instance parameters of a selected truss and update **all family types** to use new defaults (all Truss types created by Database manager).
- Change instance parameters of a selected truss and update **current type of family** to use a new default.




Current type of family

All family types

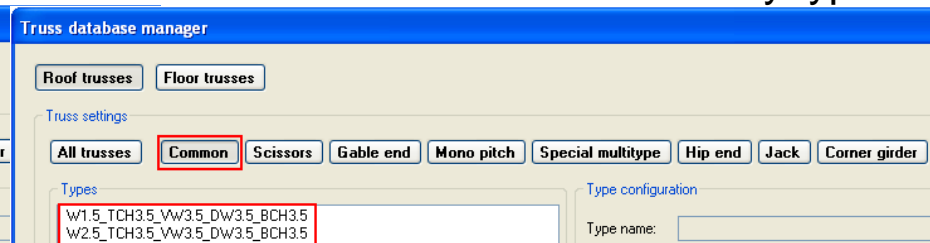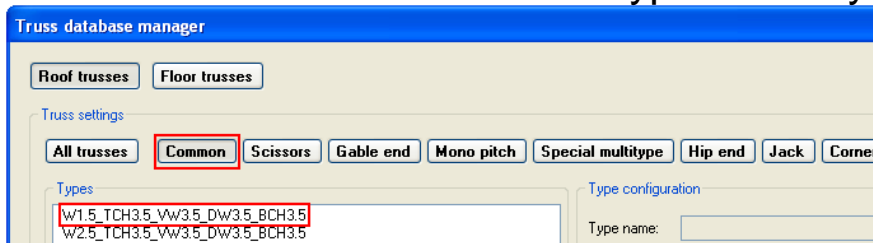



Modify Truss

- Create a new family additionally (one type, as selected one) without updating selected one.
- Create **all Common truss new family types** (all Truss types created by Database manager) without updating selected one.
- Create new **Common truss family types** and update instance parameters of **selected truss**.
- Create new **Common truss family types** and replace **selected truss** with a new family.

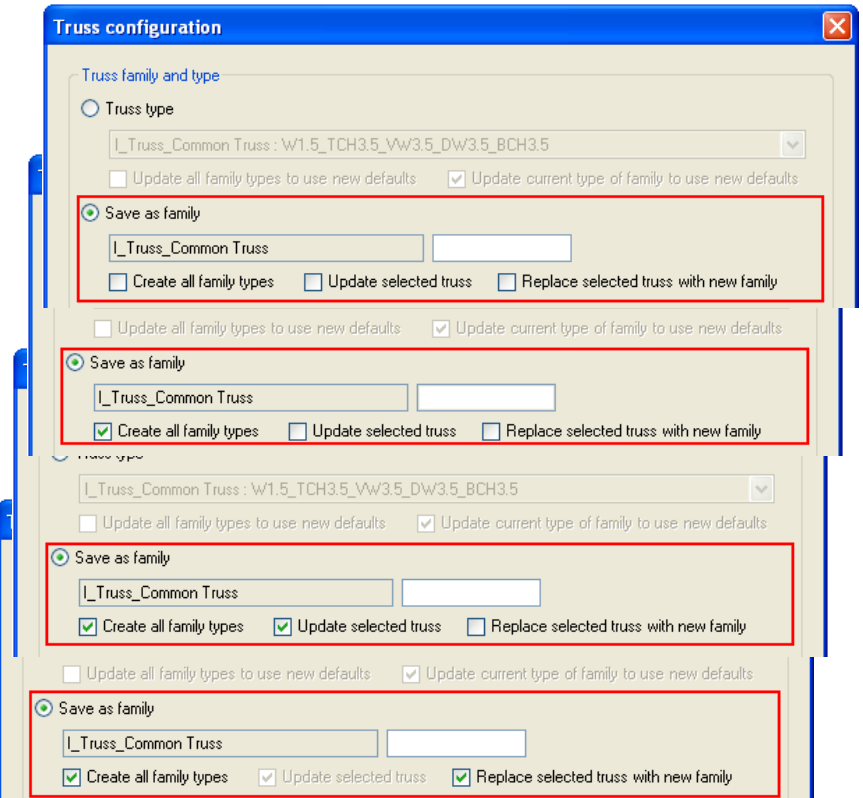






Current type of family

All family types

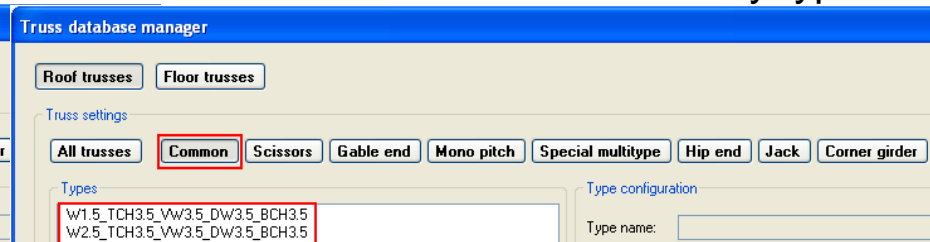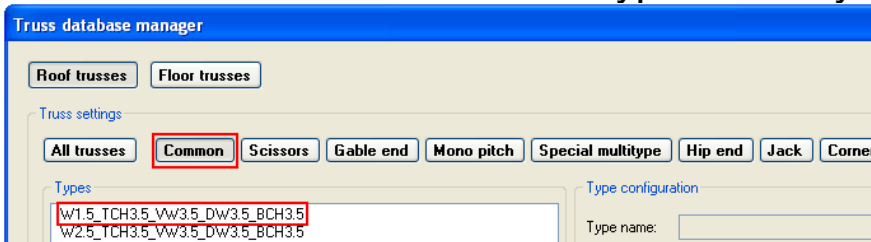

Modify Truss

- *Recalculate configuration data* function enables you to recalculate truss configuration relative to the roof geometry. Truss can be attached to the roof top faces or not.

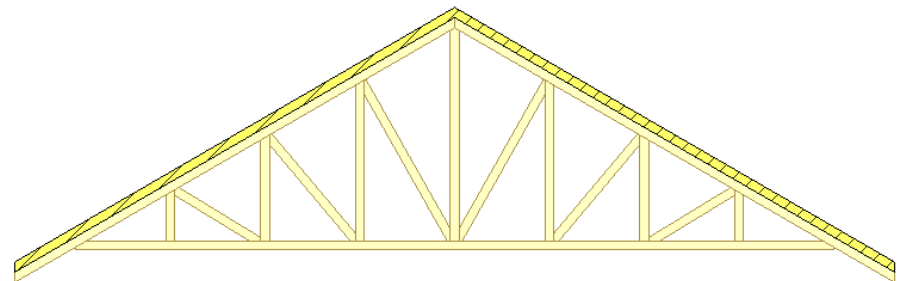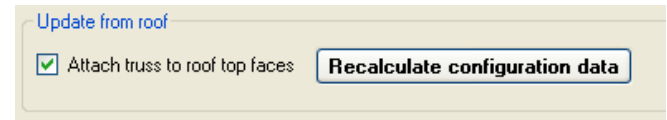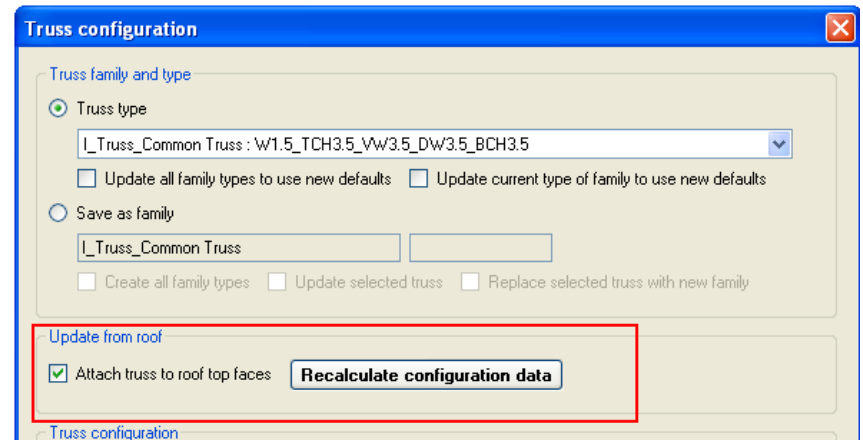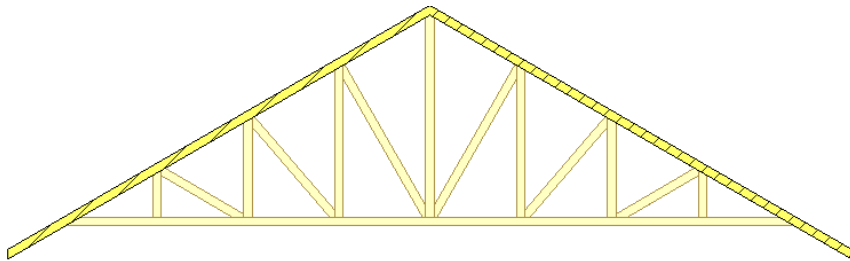



Modify Truss

Define parameters for both sides:

- *Pitch*. If you use the *Recalculate configuration data* function, the truss will get right pitch from the roof;
- *Web profile*.



“Truss+” will calculate Side lengths considering the defined slope angle automatically.

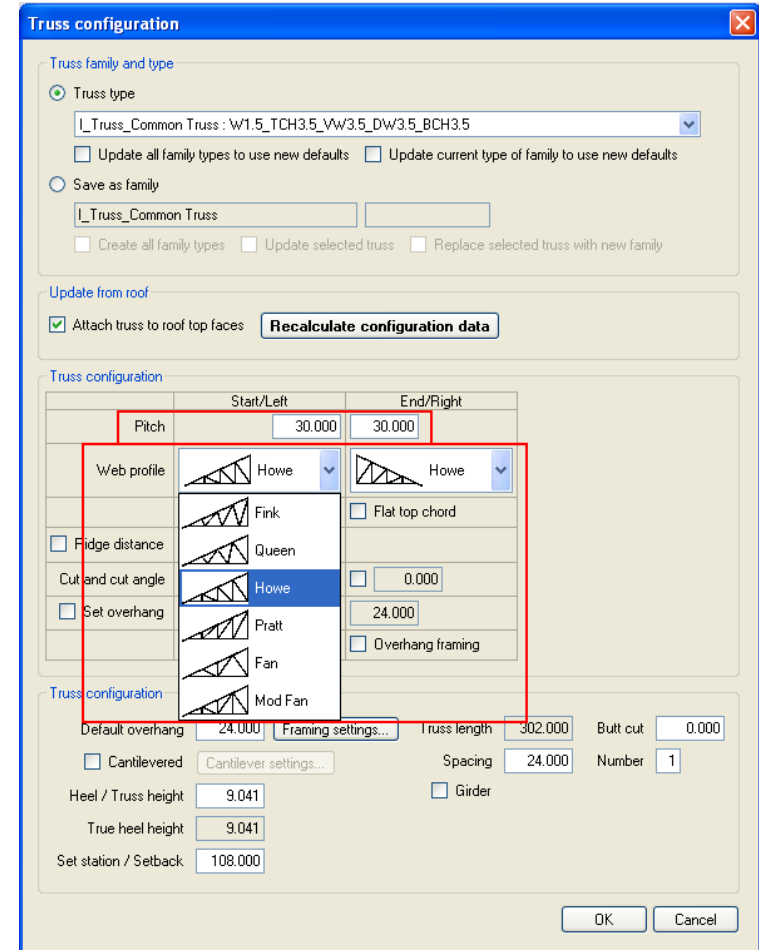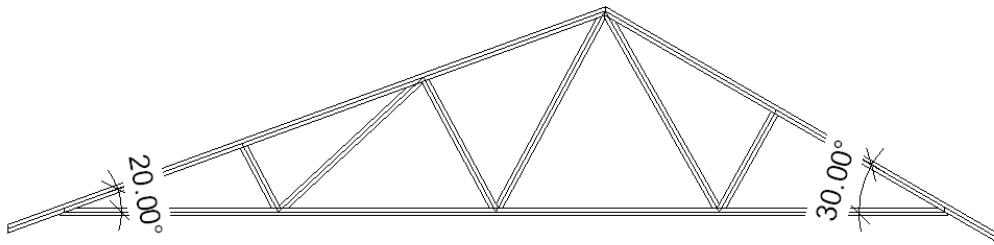

Modify Truss

- *Ridge distance.* You can *Pick line* (Model line), showing the distance or switch On the check box and add this values manually.


User can define Ridge distance and Start and End Pitch. In this case “Truss+” will set Heel if it’s needed.

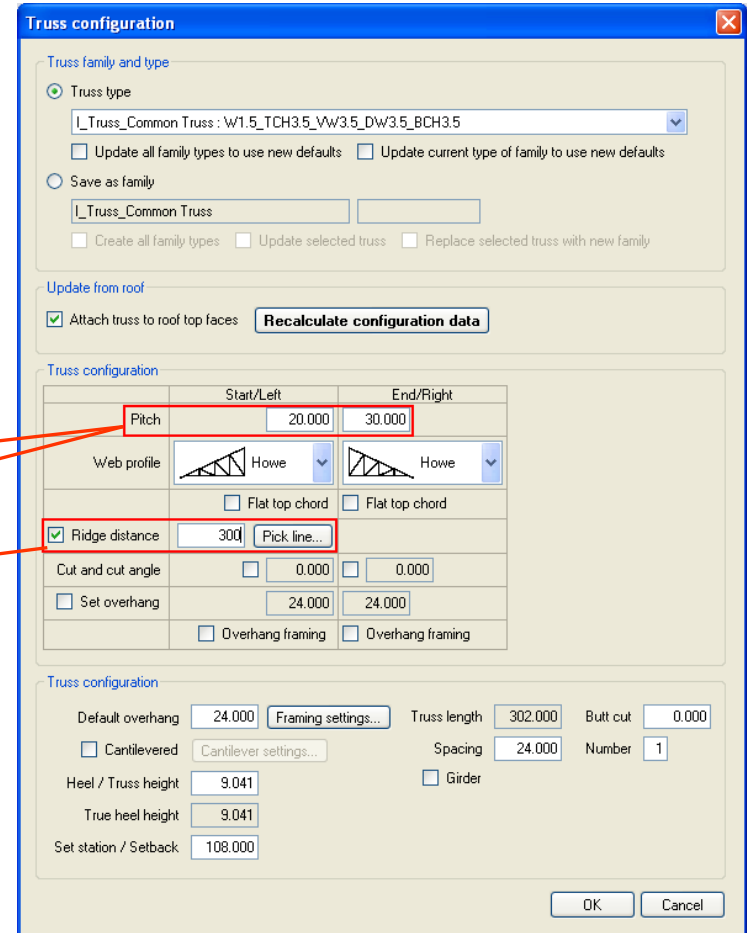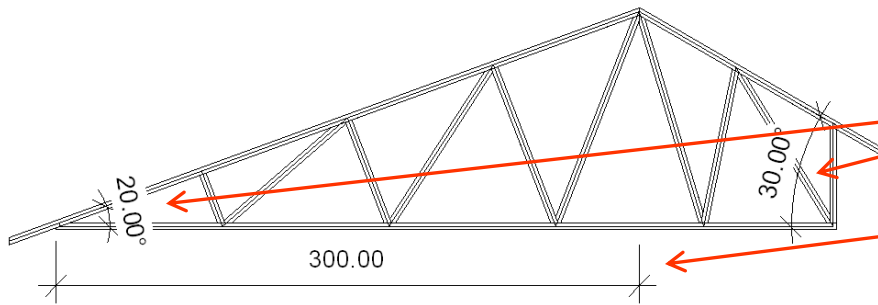

Modify Truss

In order to have Truss with Flat top chord, the user has to set :

- *Truss height* ;
- *Start and End Pitch* to zero;
- Switch On *Flat top chord* check boxes.

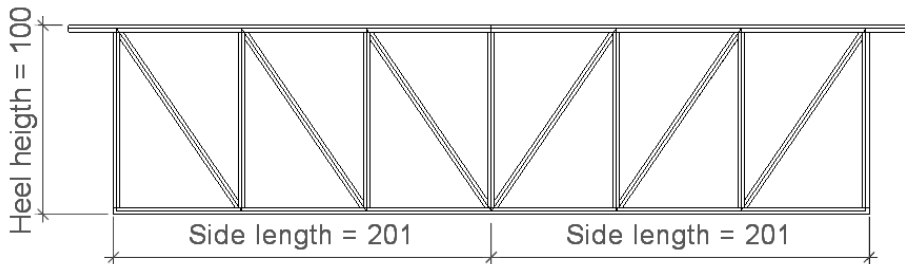

Truss configuration

Truss family and type

Truss type

L_Truss_Common Truss : W1.5_TCH3.5_VW3.5_DW3.5_BCH3.5

Update all family types to use new defaults Update current type of family to use new defaults

Save as family

L_Truss_Common Truss

Create all family types Update selected truss Replace selected truss with new family

Update from roof

Attach truss to roof top faces **Recalculate configuration data**

Truss configuration

	Start/Left	End/Right
Pitch	0.000	0.000
Web profile	Howe	Howe
	<input checked="" type="checkbox"/> Flat top chord	<input checked="" type="checkbox"/> Flat top chord
Ridge distance	300.000	Pick line...
Cut and cut angle	<input type="checkbox"/> 0.000	<input type="checkbox"/> 0.000
Set overhang	24.000	24.000
	<input type="checkbox"/> Overhang framing	<input type="checkbox"/> Overhang framing

Truss configuration

Default overhang 24.000 **Framing settings...** Truss length 302.000 Butt cut 0.000

Cantilevered **Cantilever settings...** Spacing 24.000 Number 1


Heel / Truss height 100.000 Girder

True heel height 100.000


Set station / Setback 108.000

OK Cancel


Modify Truss

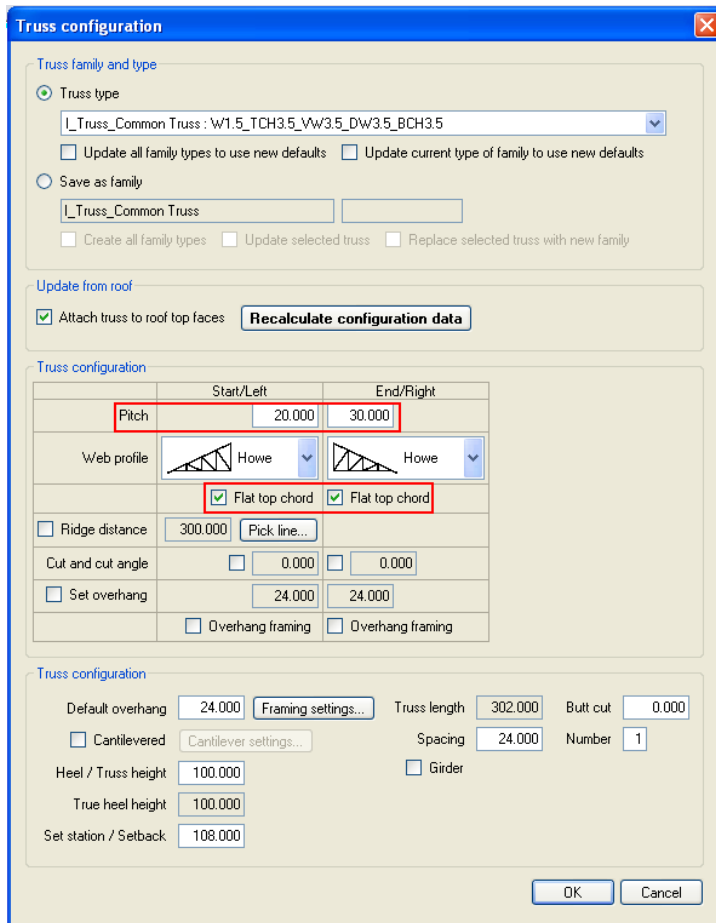

Very often the height and Side lengths of the truss are determinate of the roof hip end.

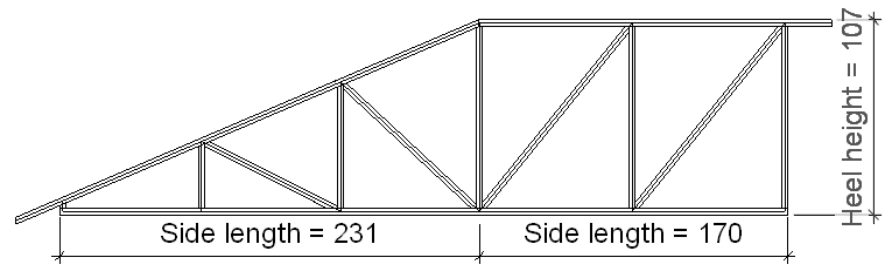

If Pitch should be set but a top chord is flat, “Truss+” will calculate Side lengths and Heel heights automatically.



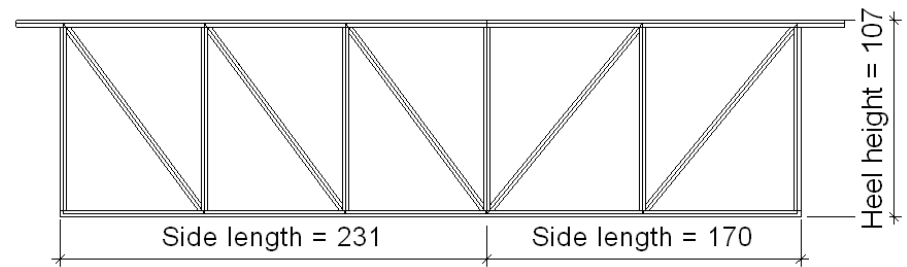


Modify Truss

- Switch On the option *Overhang framing* if it's needed.

- Define *Overhang framing settings*.

User can define different values of overhang lengths on Start and End points of the truss.

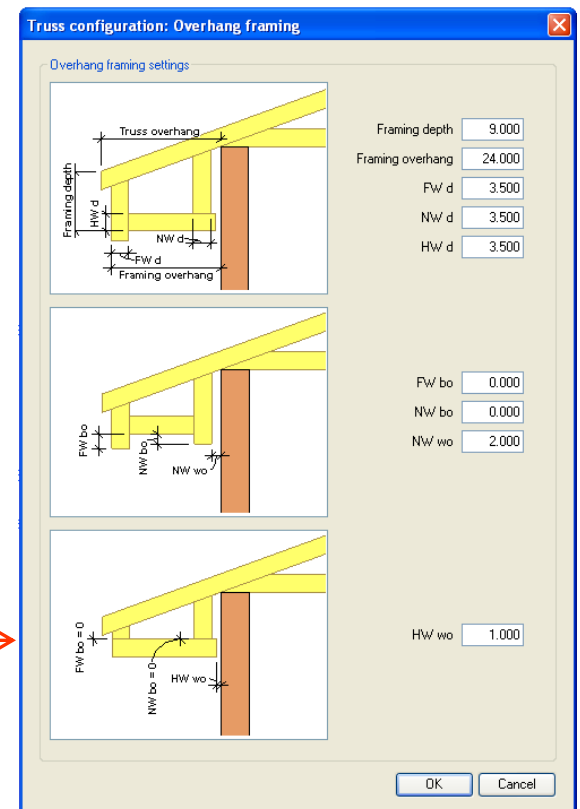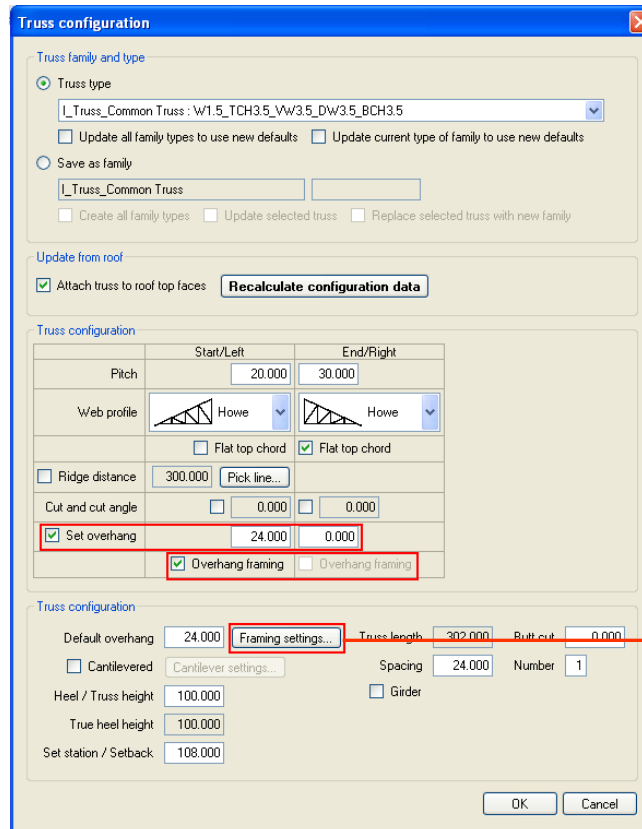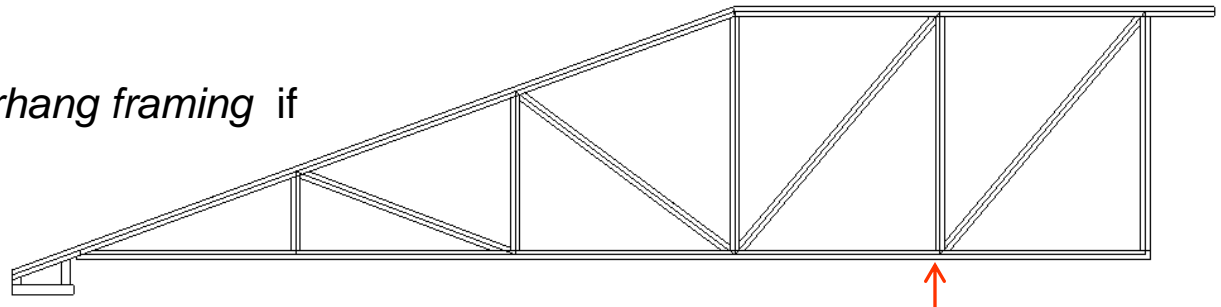

Modify Truss

Truss configuration

Truss family and type

Truss type

I_Truss_Common Truss : W1.5_TCH3.5_VW3.5_DW3.5_BCH3.5

Update all family types to use new defaults Update current type of family to use new defaults

Save as family

I_Truss_Common Truss

Create all family types Update selected truss Replace selected truss with new family

Update from roof

Attach truss to roof top faces **Recalculate configuration data**

Truss configuration

	Start/Left	End/Right
Pitch	20.000	30.000
Web profile	Howe	Howe
	<input type="checkbox"/> Flat top chord	<input checked="" type="checkbox"/> Flat top chord
Ridge distance	300.000	Pick line...
Cut and cut angle	<input type="checkbox"/> 0.000	<input checked="" type="checkbox"/> 45.000
Set overhang	<input checked="" type="checkbox"/> 0.000	<input type="checkbox"/> 0.000
	<input type="checkbox"/> Overhang framing	<input type="checkbox"/> Overhang framing

Truss configuration

Default overhang 24.000 **Framing settings...** Truss length 302.000 **Butt cut 1.000**

Cantilevered **Cantilever settings...** Spacing 24.000 Number 1

Heel / Truss height 0.000 Girder


True heel height 4.725

Set station / Setback 108.000


OK **Cancel**

If it's needed:

- Define *Cut and cut angle*



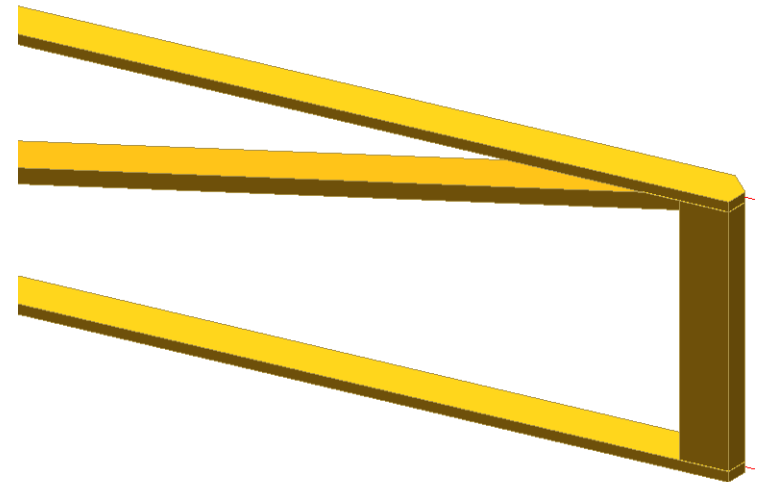


- Define the *Butt cut* value

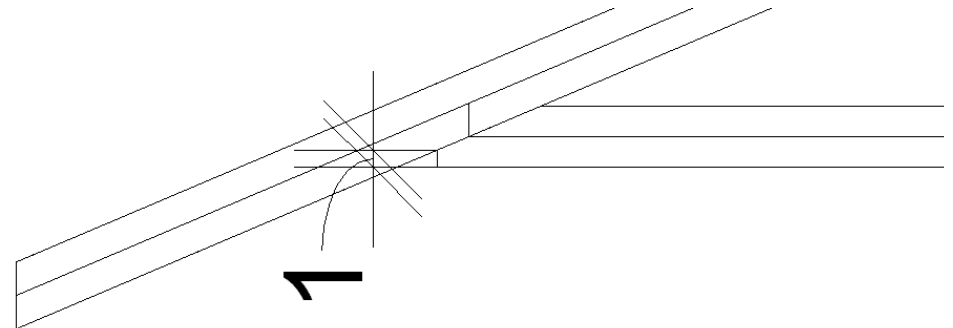

Modify Truss

- Switch On the *Cantilevered* check box if it is needed.
- Define *Cantilever settings*.

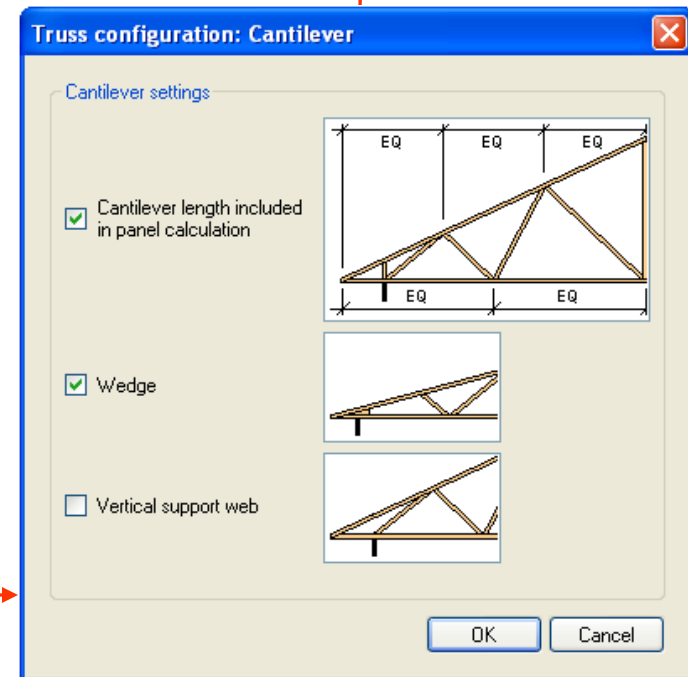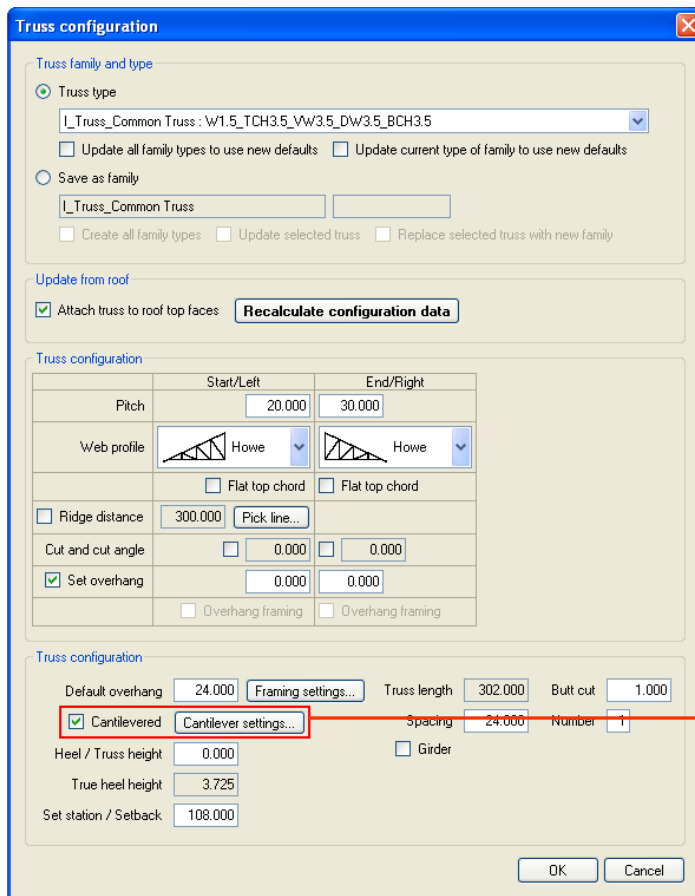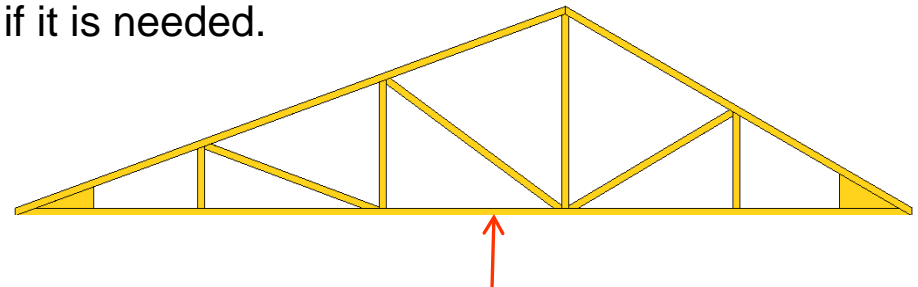

Modify Truss

- User can switch On the *Girder* check box. This option is useful for sorting and scheduling.
- *Spacing*, *Set station/Setback* and *Number* options will be described in next chapters.

Truss configuration

Truss family and type

Truss type

L_Truss_Common Truss : W1.5_TCH3.5_Vw3.5_DW3.5_BCH3.5

Update all family types to use new defaults Update current type of family to use new defaults

Save as family

L_Truss_Common Truss

Create all family types Update selected truss Replace selected truss with new family

Update from roof

Attach truss to roof top faces **Recalculate configuration data**

Truss configuration

	Start/Left	End/Right
Pitch	20.000	30.000
Web profile	Howe	Howe
	<input type="checkbox"/> Flat top chord	<input type="checkbox"/> Flat top chord
<input type="checkbox"/> Ridge distance	300.000 Pick line...	
Cut and cut angle	<input type="checkbox"/> 0.000	<input type="checkbox"/> 0.000
<input checked="" type="checkbox"/> Set overhang	0.000	0.000
	<input type="checkbox"/> Overhang framing	<input type="checkbox"/> Overhang framing

Truss configuration

Default overhang 24.000 **Framing settings...** Truss length 302.000 Butt cut 1.000

Cantilevered **Cantilever settings...** **Spacing** 24.000 **Number** 1

Heel / Truss height 0.000 **Girder**

True heel height 3.725

Set station / Setback 108.000

OK Cancel

Increase your productivity !



AGA CAD Ltd.
Zalgirio 112A, LT-09300 Vilnius,
Lithuania
Tel. +370 5 2398111
Fax +370 5 2398113
Email info@aga-cad.lt
info@tools4revit.com
www.tools4revit.com